

# SYSTÈME 7 SEL EVO+

Clean water with simplicity



Salt electrolysis



Auto-adaptability to water salinity



Change of polarity



Shock chlorination



Slow Mode



Low water safety mechanism



Diagnosis



# SYSTÈME 7 SEL EVO+

A natural environmentally-friendly treatment.

Designed using the most advanced technologies with automatic change in polarity, the SYSTÈME 7 SEL EVO+ will make your life easier.

## EVO technology+:

Simple and user-friendly chlorine production setting in a range of between 15 and 100%.

- "Normal" range (economic) up to 70%.
- "Performance" range from 75 to 100% (setting to be used in cases of heavy pool use and high water temperature).
- "Boost or forced" mode 120% for 24h maximum.

For simple and effective pool water treatment in every situation.

## 1 Very easy installation

and can be adapted to any filter systems.

## 2 Easy to use



Easy to read thanks to a display that gives you clear and accurate information on the percentage of production, the diagnoses and the "forced operation", "change of polarity" and "Slow Mode" functions in one glance.

## Auto-adaptability to water salinity

The appliance maintains constant production by adapting to the variations in salinity during the season (losses, filter leaching, water top-ups). The life of the electrodes is optimised.

## Shock chlorination

This function performs super-chlorination for 24 hours after periods of heavy use.

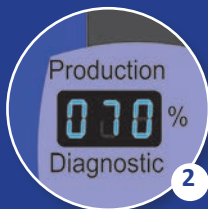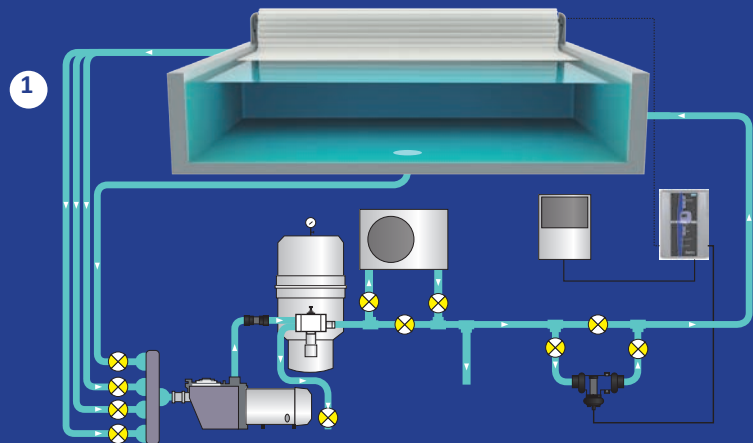

**Clear troubleshooting display** facilitating inspections, maintenance and telephone assistance.

## 3 Slow Mode integrated and configurable system

For swimming pools equipped with slatted covers or shelters. The system automatically reduces production to a configurable value when the pool is covered.

## Recommended combinations

Constant water quality thanks to controlled salt electrolysis and pH regulation.

4 + Stér-pH or Stér-pH U: pH regulation system.

5 + Stéredox U: salt electrolysis controlled and regulated by Redox measurement.



\* See general conditions of sale.

## HYDRAULIC

**Last generation cell and bipolar electrode:** optimised outputs, more practical, easy to install and ever incomparable effectiveness.



## READY TO INSTALL READY TO OPERATE

SYSTÈME 7 SEL EVO+ is delivered with:

- Control box.
- Electrolysis cell with its salt electrode.
- Complete installation kit and all the diameter 50 and 63 mm connectors required for assembly.
- Salinity test

## OPTIONS

- Pool earth stud.
- 75 mm fitting.



## WHICH APPLIANCE SHOULD YOU CHOOSE?

Pool	Model
1 to 25 m <sup>3</sup>	SYSTÈME 7 SEL EVO+ 25
25 to 40 m <sup>3</sup>	SYSTÈME 7 SEL EVO+ 40
40 to 60 m <sup>3</sup>	SYSTÈME 7 SEL EVO+ 60
60 to 80 m <sup>3</sup>	SYSTÈME 7 SEL EVO+ 80
80 to 100 m <sup>3</sup>	SYSTÈME 7 SEL EVO+ 100
100 to 120 m <sup>3</sup>	SYSTÈME 7 SEL EVO+ 120
120 to 160 m <sup>3</sup>	SYSTÈME 7 SEL** 160

\*\* Model fitted with 2 historic vessels with single pole electrode.

# Stérilcor

Recommended retailer

Nextpool GROUP